

# Schrader TPMS Hand Tools

**Schrader's full-service TPMS program** includes all the tools your shop needs for quick and easy TPMS service.



## PN 20140

### T-10 Torque Tool

Installs replacement snap-in valves to Schrader OE quality sensors. Preset to 11.5 in-lbs.



## PN 20141

### Valve Core Torque Tool

Tightens valve cores to OE specifications. Preset to 3.5 in-lbs.



## PN 20142

### Universal Nut Torque Tool

Tightens valve cores and serves as a torque wrench for valve nuts on TPMS installations. Variable torque settings 30-90 in-lbs. Comes with 11mm and 12mm sockets.



## PN 20145

### T-20 Torque Tool

A pre-set torque tool specially designed for use with TPMS sensors that use a T-20 screw to attach the aluminum valve stem to the sensor body. Preset to 4Nm.



## PN 20144

### Grommet Removal Tool

This hand tool is designed to safely remove the rubber grommet from the aluminum stem of a TPMS sensor. Receiving hole can be used to install a new grommet.



## PN 20139

### Nut Torque Wrench Kit

Torque tool and precision quality torque wrench for installing TPMS sensor nuts.