

TPMS HAND TOOLS

Proper Servicing of TPMS

requires specialty tools and replacement parts for proper fit and function. Schrader has the sensor parts and tools required for sensor service or repair.



20140
T-10 Torque Tool
Installs Schrader snap-in valves



20141
Valve Core Torque Tool
With pocket clip to keep this tool at hand in your pocket.



20145
T-20 Torque Tool
Installs adjustable clamp-in valves. Storage case included.



20142
Universal Nut Torque Tool
Serves as a torque wrench for valve nuts. Storage case included.



20138
Torque Screwdriver with Sockets.

For more information:
1.800.288.1084
SchraderInternational.com

EZ-sensor

SCHRADER